

SA-BG900 POCKET TYPE AIR BLOW GUN

Instruction Manual

Introduction

- This instruction manual describes important precautions and handling methods for safety use. Please be sure to read it and fully understand before using it.
- Please keep this instruction manual in a safe place so that you can check it immediately after reading it.
- Items with a mark  are especially important for safety, so be sure to observe it.

Warning

- Never use above the maximum working pressure (maximum working pressure: 1.3Mpa approx. 13kgf/cm²).
- Do not blow toward the human body.
- When working, wear appropriate clothing and wear protective equipment such as masks and glasses.
- Please do not modify it.
- Please work while paying attention to the scattering of dust to the surroundings.
- Please note that it will be damaged if thrown or dropped.
- Please use air control unit to provide clean air by compressor.

Instructions

1. Connection method and usage
 - (1) Connect the air coupler of the Pocket type air blow gun and the air hose from the compressor.
 - (2) When you press the trigger on the top, press air is sprayed from the nozzle.
 - (3) Change the blowing distance according to the pressure of the air and the length of the bristles on the blowing surface.
 - (4) Pocket type air blow gun is with PS19 female thread, please select proper coupler when using.

Lubrication maintenance method

Pocket type air blow gun is a trigger-type air gun. The operation of the trigger may become harder as you use it. In that case, it can be solved by lubricating the alum. Housing as maintenance. Please do regular lubrication maintenance like below step.

1. Remove the trigger cover and clean dust and dirt from the alum. housing at the base of the button.(Diagram 1)
2. Lubricate the housing by any brand air tool oil. (About 1 drop of oil is enough) (Diagram 2)
3. Press the trigger couple of times to blend the oil. Lubrication work is now completed (Diagram 3)



Diagram 1



Diagram 2

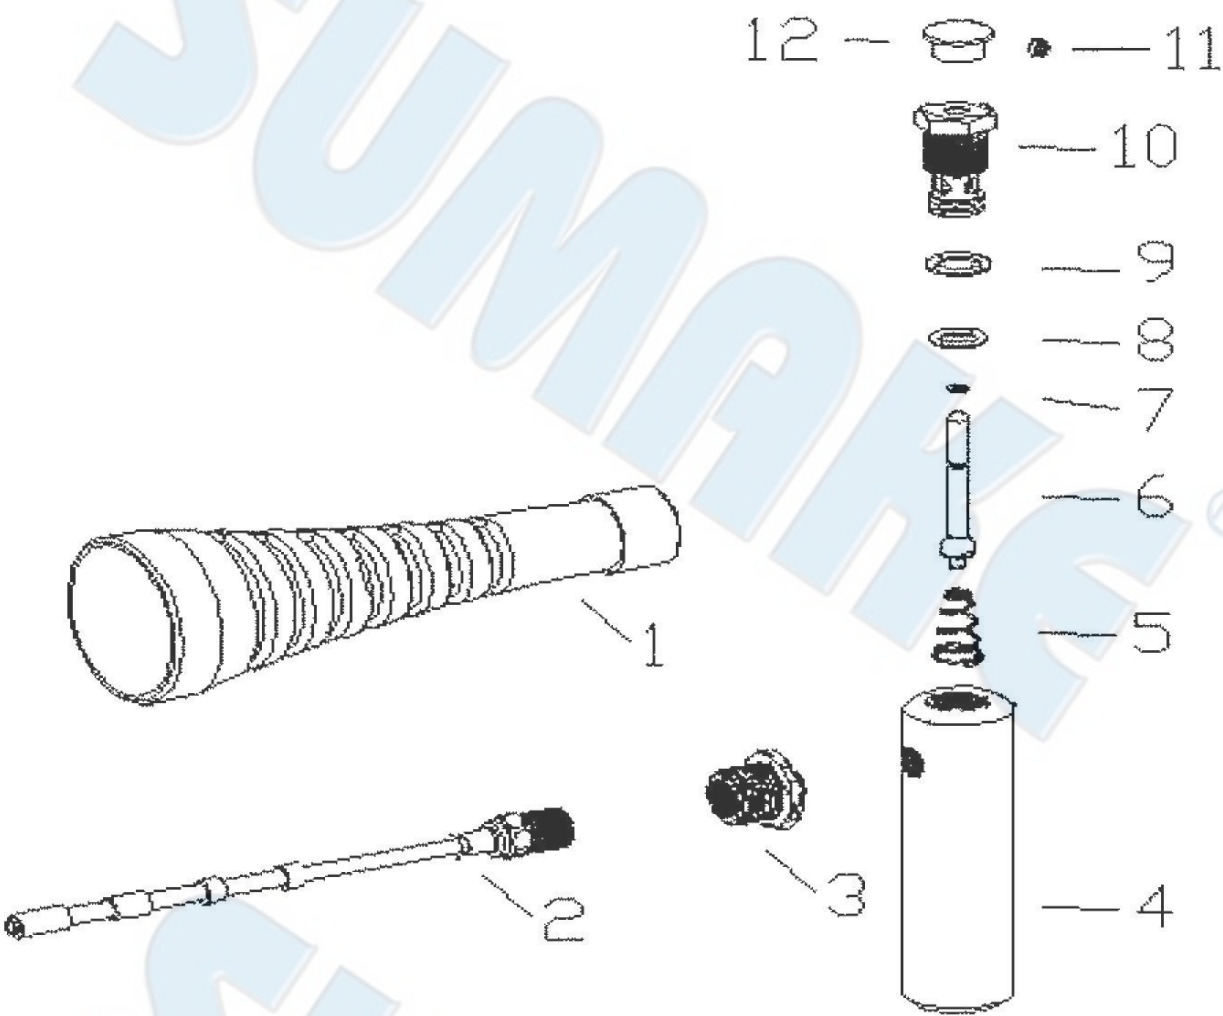


Diagram 3



SA-BG900

POCKET TYPE AIR BLOW GUN



PARTS LIST

No.	Parts No.	Description	Q'ty
1	SABG900-01	Nozzle	1
2	SABG900-02	Tube	1
3	SABG900-03	Screw	1
4	SABG900-04	Alu. Housing	1
5	SABG900-05	Spring	1
6	SABG900-06	Valve Stem	1
7	SABG900-07	O-Ring	1
8	SABG900-08	O-Ring	1
9	SABG900-09	O-Ring	1
10	SABG900-10	Nut	1
11	SABG900-11	Screw	1
12	SABG900-12	Trigger	1